

CHALLENGER MT855 BCC30440

1116001	2015-12-14	TROUBLESHOOT	TRANSMISSION	SHIFTER	
1116001	2015-12-14	REPLACE	TRANSMISSION	SHIFTER	
1116001	2015-12-14	TRAVEL TO/FROM	MACHINE		
1114307	2015-01-12	REMOVE& INSTALL	REACTION ARM	RIGHT	
1114307	2015-01-12	RECONDITION	REACTION ARM	RIGHT SIDE	
1114307	2015-01-12	REPLACE WITH REMAN	WATER PUMP		
1114307	2015-01-12	REPLACE GASKET/RESEAL	IDLER/IDLER WHEEL	RIGHT INNER	
1114307	2015-01-12	REPLACE GASKET/RESEAL	IDLER/IDLER WHEEL	LEFT OUTER	
1114307	2015-01-12	ADD	HYDRAULIC OIL		
1114307	2015-01-12	TRAVEL TO/FROM	MACHINE		
1114232	2014-12-09	PERFORM	PM 1		
1114232	2014-12-09	REPLACE GASKET/RESEAL	TRANSMISSION SHAFT	SEAL	
1113991	2014-10-23	TROUBLESHOOT	FUEL PRESSURE SENSOR		
1113991	2014-10-23	TRAVEL TO/FROM	MACHINE		
1113978	2014-10-22	REPLACE	BOGIE	WHEEL	
1113978	2014-10-22	TRAVEL TO/FROM	MACHINE		
1113037	2014-05-27	TROUBLESHOOT	AIR CONDITIONER		
1113037	2014-05-27	TRAVEL TO/FROM	MACHINE		
1112824	2014-05-05	TROUBLESHOOT	AIR CONDITIONER		
1112824	2014-05-05	REPAIR	AIR CONDITIONER		
1112824	2014-05-05	TRAVEL TO/FROM	MACHINE		
1112234	2013-12-09	PERFORM	PM 1		
1112234	2013-12-09	TROUBLESHOOT	AIR CONDITIONER		
1112234	2013-12-09	REPAIR	AIR CONDITIONER		
1112234	2013-12-09	REPLACE GASKET/RESEAL	TRANSMISSION SHAFT	INPUT	
1112234	2013-12-09	REPLACE GASKET/RESEAL	FRONT COVER/HOUSING		
1112234	2013-12-09	REPLACE	HOOD GAS SPRING		BOTH
1112234	2013-12-09	REPAIR	AIR CONDITIONER		
1112234	2013-12-09	REPLACE GASKET/RESEAL	TRANSMISSION SHAFT	INPUT	
1112234	2013-12-09	TRAVEL TO/FROM	MACHINE		
1112079	2013-11-08	TROUBLESHOOT	TRACK/BELT TENSIONER	LEFT	
1112079	2013-11-08	TRAVEL TO/FROM	MACHINE		

1110916	2013-05-08	TROUBLESHOOT	AIR CONDITIONER			
1110916	2013-05-08	REMOVE& INSTALL	CAB HEATER	VALVE		
1110916	2013-05-08	CHECK	A/C COMPRESSOR DRIVE			
1110916	2013-05-08	REMOVE& INSTALL	HOSES & LINES			
1110916	2013-05-08	TRAVEL TO/FROM	MACHINE			
1110916	2013-05-08	TRAVEL TO/FROM	MACHINE			
1110916	2013-05-08	TRAVEL TO/FROM	MACHINE			
1110872	2013-05-06	TROUBLESHOOT	AIR CONDITIONER			
1110872	2013-05-06	TRAVEL TO/FROM	MACHINE			
1110843	2013-05-02	TROUBLESHOOT	TRACK/BELT TENSIONER	RIGHT SIDE		
1110843	2013-05-02	TRAVEL TO/FROM	MACHINE			
1110576	2013-03-07	REMOVE & INSTALL	FUEL TANK CAP			
1110562	2013-03-01	ADD	FUEL			
1110562	2013-03-01	WASH	TRACTOR			
1110447	2013-01-29	PERFORM	PM 3			
1110447	2013-01-29	SPECIAL CLEAN	MACHINE	USED		
1110447	2013-01-29	TROUBLESHOOT	LIGHT(S)			
1110447	2013-01-29	REMOVE & INSTALL	AIR FILTER ELEMENT			
1110447	2013-01-29	TROUBLESHOOT	WINDSHIELD WASHER	REAR		
1110447	2013-01-29	PERFORM MAINTENANCE ON	BOGIE	WHEEL	SET (ALL)	
1110447	2013-01-29	TROUBLESHOOT	HYDRAULIC CONTROL VALVE			
1110447	2013-01-29	REPLACE	BOGIE	PLUG(S)		
1110447	2013-01-29	MOVE	FUEL SUPPLY/RETURN LINES			
1110447	2013-01-29	INSTALL	FLOORMAT			
1110447	2013-01-29	INSTALL	SEAT ASSEMBLY			
1110447	2013-01-29	REMOVE & INSTALL	SEALS & GASKETS	CARRIER		
1110447	2013-01-29	INSTALL	HYDRAULIC CONTROL VALVE			
F083849	2012-05-29	TROUBLESHOOT	MACHINE			
F083849	2012-05-29	TRAVEL TO/FROM	MACHINE			
F083849	2012-05-29	REPLACE GASKET/RESEAL	FINAL DRIVE	LEFT		
F057125	2008-11-19	INSPECT	MACHINE	FOR LEAKS		
F057125	2008-11-19	REMOVE & INSTALL	HYDRAULIC OIL FILTER			
F056686	2008-10-30	TROUBLESHOOT	HEATER & AIR CONDITIONER			
F056686	2008-10-30	TRAVEL TO/FROM	MACHINE			
F050263	2008-01-09	WASH	MACHINE			
F050263	2008-01-09	REMOVE & INSTALL	CAB			

F050263	2008-01-09	REMOVE & INSTALL	UNDERCARRIAGE		BOTH SIDES
F050263	2008-01-09	REMOVE & INSTALL	COUNTERSHAFT TRANSMISSION		
F050263	2008-01-09	PERFORM PRODUCT UPDATE ON	COUNTERSHAFT TRANSMISSION		
F050263	2008-01-09	TEST AFTER REPAIR	MACHINE		
F050263	2008-01-09	TRANSPORT	MACHINE		
F050265	2008-01-09	REMOVE & INSTALL	TRANSMISSION OIL		
F050265	2008-01-09	REMOVE & INSTALL	RADIATOR GRILLE		
F050265	2008-01-09	REPLACE	ENGINE & OUTPUT DRIVE AS		
F050265	2008-01-09	REMOVE & INSTALL	CHARGE PUMP		
F050265	2008-01-09	REPLACE	LIGHT(S)		
F050265	2008-01-09	REPLACE	SEALS & GASKETS		
F050265	2008-01-09	REMOVE & INSTALL	ENGINE & OUTPUT DRIVE AS		
F050265	2008-01-09	INSTALL	DRAIN VALVE		
F045738	2007-06-01	TROUBLESHOOT	ENGINE		
F045738	2007-06-01	TRAVEL TO/FROM	MACHINE		
F037188	2006-04-04	PERFORM PRODUCT UPDATE ON	REACTION ARM		
F037188	2006-04-04	REPLACE GASKET/RESEAL	AIR CONDITIONER LINES		
F037188	2006-04-04	PERFORM PRODUCT UPDATE ON	BRACES & SUPPORTS	ENGINE	
F037188	2006-04-04	REMOVE & INSTALL	AIR CONDITIONER		
F037188	2006-04-04	PERFORM MAINTENANCE ON	BOGIE		
F037188	2006-04-04	REMOVE & INSTALL	BOGIE		
F037188	2006-04-04	TRANSPORT	MACHINE		
F037045	2006-03-28	PERFORM PRODUCT UPDATE ON	AUTO GUIDANCE		
F037045	2006-03-28	INSTALL	AUTO GUIDANCE		
F037045	2006-03-28	TRAVEL TO/FROM	MACHINE		
F036480	2006-02-22	PERFORM PRODUCT UPDATE ON	AUTO GUIDANCE		
F029440	2005-02-25	PAINT	ENGINE		
F029440	2005-02-25	PAINT	MACHINE		
F029440	2005-02-25	TRANSPORT	MACHINE		
F024247	2004-05-10	PERFORM PRODUCT UPDATE ON	ALTERNATOR		
F024247	2004-05-10	PERFORM PRODUCT UPDATE ON	AIR CONDITIONER		
F024247	2004-05-10	PERFORM PRODUCT UPDATE ON	HEATER HOSE (CAB)		
F024247	2004-05-10	PERFORM PRODUCT UPDATE ON	AIR CONDITIONER		
F024247	2004-05-10	REPAIR	AIR CONDITIONER LINES		

F024247	2004-05-10	REMOVE	AIR CONDITIONER LINES		
F024247	2004-05-10	TRAVEL TO/FROM	MACHINE		
F024054	2004-04-29	REPAIR	AIR CONDITIONER		
F024054	2004-04-29	TRAVEL TO/FROM	MACHINE		
F023594	2004-04-07	PERFORM PRODUCT UPDATE ON	CAB DOOR		
F023594	2004-04-07	PERFORM PRODUCT UPDATE ON	BRAKE ACCUM CHARGING VLV		
F023594	2004-04-07	PERFORM PRODUCT UPDATE ON	BRAKE PEDAL		
F023594	2004-04-07	PERFORM PRODUCT UPDATE ON	WINDOW GLASS		
F023594	2004-04-07	TRAVEL TO/FROM	MACHINE		
F022243	2004-01-12	REMOVE	AUTO GUIDANCE		
F022243	2004-01-12	PERFORM PRODUCT UPDATE ON	AXLE HOUSING ASSEMBLY		
F022243	2004-01-12	PERFORM PRODUCT UPDATE ON	RADIATOR CAP		
F022243	2004-01-12	PERFORM PRODUCT UPDATE ON	ALTERNATOR		
F022243	2004-01-12	TRAVEL TO/FROM	MACHINE		
A006332	2003-09-23	REVISIT	MACHINE		
A006332	2003-09-23	PERFORM MAINTENANCE ON	ENGINE		
A006332	2003-09-23	PERFORM PRODUCT UPDATE ON	IDLER/IDLER WHEEL		
A006332	2003-09-23	PERFORM PRODUCT UPDATE ON	COUNTERWEIGHT		
A006332	2003-09-23	PERFORM PRODUCT UPDATE ON	SUN LOAD SENSOR		
A006332	2003-09-23	PERFORM PRODUCT UPDATE ON	AIR CONDITIONER		
A006332	2003-09-23	PERFORM PRODUCT UPDATE ON	ELECTRIC SYSTEM		
A006332	2003-09-23	REPAIR	AFTERCOOLER		
A006332	2003-09-23	REPAIR	LIGHT(S)		
A006332	2003-09-23	REPAIR	HEATER & AIR CONDITIONER	HOUSING	
A006332	2003-09-23	INSTALL	RADIO		
A006332	2003-09-23	REMOVE	BEACON/STROBE LIGHT		
A006332	2003-09-23	TROUBLESHOOT	TRANSMISSION		
A006332	2003-09-23	REMOVE & INSTALL	TRANSMISSION		
A006332	2003-09-23	PERFORM PRODUCT UPDATE ON	DIFFERENTIAL		
A006332	2003-09-23	REPAIR	TRANSMISSION		
A006332	2003-09-23	INSTALL	SLOW MOVING VEHICLE SIGN		
A006332	2003-09-23	INSTALL	COUNTERWEIGHT	FRONT	
A006332	2003-09-23	WASH	MACHINE		
A006332	2003-09-23	MISCELLANEOUS	RENTAL REPLACEMENT EXP		

A006296	2003-09-17	INSTALL	BATTERY CABLE			
A006077	2003-08-04	REPAIR	ENGINE ENCLOSURE	LEFT		
A006077	2003-08-04	REPAIR	AIR CONDITIONER			
A006077	2003-08-04	REMOVE	COUNTERWEIGHT FRAME	FRONT		
A006019	2003-07-21	TEST	DIFFERENTIAL	BEARING		
A006019	2003-07-21					
A005689	2003-05-16	TRAVEL TO/FROM	MACHINE			
A005689	2003-05-16	TROUBLESHOOT	STEERING OIL FILTER			
A005689	2003-05-16	REMOVE & INSTALL	DIFF STEERING MOTOR	SWITCH(S)		
A005689	2003-05-16	REMOVE & INSTALL	THREE-POINT HITCH			
A005689	2003-05-16	PERFORM PRODUCT UPDATE ON	DIFFERENTIAL			
A005689	2003-05-16	REMOVE, CLEAN & INSTALL	TRANSMISSION			
A005689	2003-05-16	REMOVE, CLEAN & INSTALL	HYDRAULIC SYSTEM			
A005689	2003-05-16	REMOVE, CLEAN & INSTALL	FINAL DRIVE			
A005689	2003-05-16	REMOVE, CLEAN & INSTALL	SERVICE BRAKE CONTROL			
A005689	2003-05-16	REMOVE & INSTALL	COUNTERWEIGHT			
A005689	2003-05-16	REMOVE & INSTALL	BEACON/STROBE LIGHT			
A005689	2003-05-16	REMOVE & INSTALL	RADIO			
A005689	2003-05-16	REMOVE & INSTALL	RECEIVER			
A005689	2003-05-16	REMOVE & INSTALL	LIGHT(S)			
A005689	2003-05-16	REMOVE & INSTALL	SWINGING DRAWBAR			
A005689	2003-05-16	REMOVE & INSTALL	ENGINE GUARD			
A005689	2003-05-16	REMOVE & INSTALL	BEADLESS TIRE TRACK BELT			
A005689	2003-05-16	REMOVE & INSTALL	OPERATOR DISPLAY IND			
A005689	2003-05-16	SPECIAL CLEAN	FLUIDS & HYDRAULICS			
A005666	2003-05-12	TRAVEL TO/FROM	MACHINE			
A005666	2003-05-12	REMOVE & INSTALL	ALTERNATOR			
A005598	2003-04-29	TRAVEL TO/FROM	MACHINE			
A005598	2003-04-29	PERFORM PRODUCT UPDATE ON	GLOBAL POS SYS ELEC CONT			
A005598	2003-04-29	REPAIR	GLOBAL POS SYS ELEC CONT			
A005509	2003-04-09	PERFORM PRODUCT UPDATE ON	SOFTWARE			
A005509	2003-04-09	PERFORM PRODUCT UPDATE ON	SERVICE BRAKE			
A005509	2003-04-09	PERFORM PRODUCT UPDATE ON	CAB DOOR			
A005509	2003-04-09	PERFORM PRODUCT UPDATE ON	GLOBAL POS SYS ELEC CONT			

A005509	2003-04-09	PERFORM PRODUCT UPDATE ON	GLOBAL POS SYS ELEC CONT		
A005073	2002-12-20	PRE-DELIVER	MACHINE		
A005073	2002-12-20	INSTALL	RADIO		
A005073	2002-12-20	INSTALL	CASE DRAIN OIL FILTER		
A005073	2002-12-20	PERFORM PRODUCT UPDATE ON	AIR CONDITIONER		
A005073	2002-12-20	ADD	ENGINE COOLANT		
A005073	2002-12-20	REPAIR	TRACK ROLLER		
A005073	2002-12-20	ADJUST	TRACK ROLLER FRAME		
A005073	2002-12-20	ADJUST	FUEL TANK		
A005073	2002-12-20	INSTALL	FUEL		
A005073	2002-12-20	INSTALL	COUNTERWEIGHT		
A005073	2002-12-20	ADJUST	COMPARTMENT DOOR		
A005073	2002-12-20	ADJUST	AFTERCooler		
A005073	2002-12-20	ADJUST	AIR CONDITIONER LINES		
A005073	2002-12-20	WASH	MACHINE		